

How Do I test My OxyProbes?


Purpose for test:

Dissolved oxygen membrane cartridges contain an oxygen-permeable, polymer membrane, which is impermeable to liquid. Improper storage or accidental handling of the DO sensor or membrane cartridge can damage the polymer membrane. A hairline scratch, slight abrasion or any tear of the polymer membrane may render the cartridge inoperable. Often the damage may not be visible to the naked eye.

STEP 1. VISUAL EXAMINATION

Remove the membrane cartridge from its storage vial or from the dissolved oxygen sensor. Be careful not to scratch or abrade the polymer membrane portion of the cartridge.

Visually inspect the outer surface polymer membrane for scratches, scars, abrasions or tears.

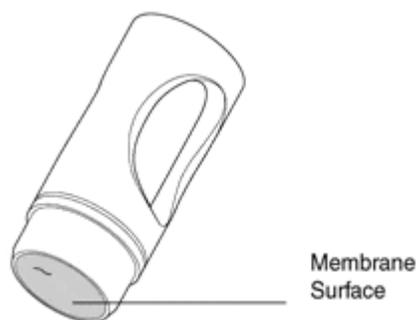

STEP 2. PLUNGER “READY” POSITION


Install the nosepiece onto the syringe and retract the plunger of the membrane tester to the “ready” position as shown below.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2022 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.


TMP-BF-102101

How Do I test My OxyProbes?

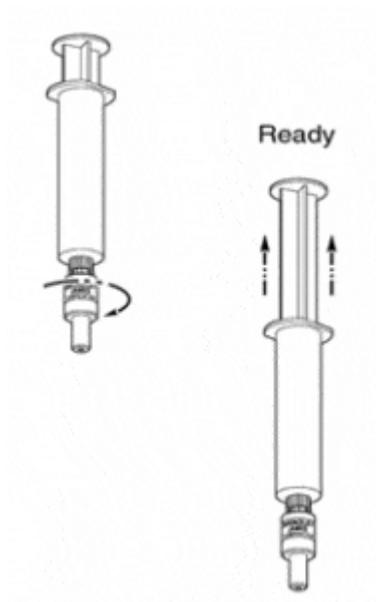

STEP 3. MEMBRANE CARTRIDGE INSTALLATION

Insert the tip of the membrane tester into DI water to lubricate it before installing the membrane cartridge as shown below. Avoid excessive force.

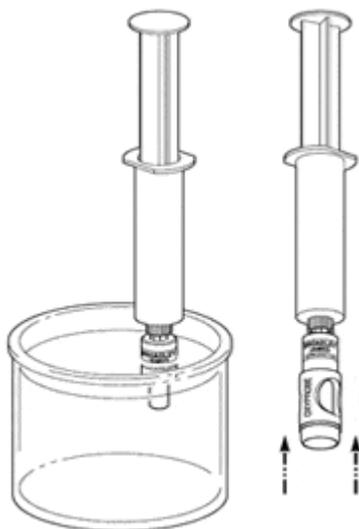

STEP 4. APPLYING PRESSURE TO THE MEMBRANE CARTRIDGE


The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2022 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.

TMP-BF-102101

How Do I test My OxyProbes?

Slowly compress the plunger until the membrane cartridge bladder slightly protrudes from the thumb and forefinger slots of the cartridge housing.

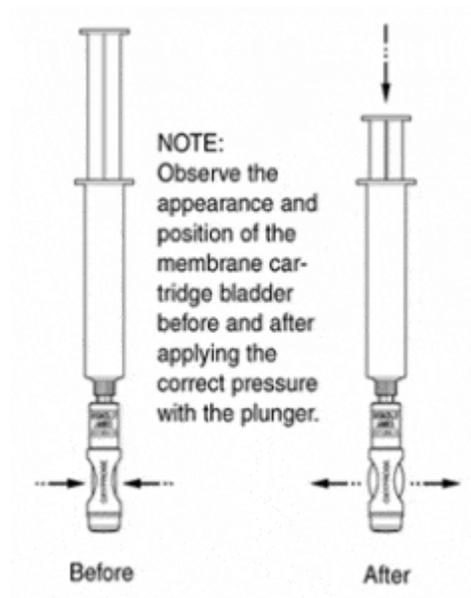

STEP 5. MEMBRANE CARTRIDGE TEST

Place membrane tester with the membrane cartridge into a beaker of DI water as shown. Make certain the front of the membrane cartridge is completely submerged.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2022 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.


TMP-BF-102101

How Do I test My OxyProbes?



STEP 6. ASSESSING DAMAGED MEMBRANE CARTRIDGES

While maintaining a slight pressure on the plunger to keep the bladder extended, slowly rotate the test assembly in the water.

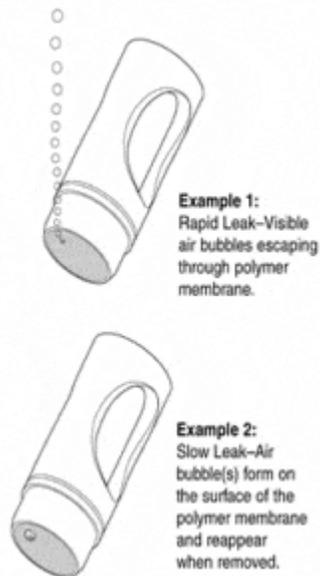

Look for any signs of air bubbles which indicate a damaged membrane or bladder. Refer to the two illustrations for typical

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2022 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.

TMP-BF-102101

How Do I test My OxyProbes?

examples of air leaks found when the membrane has been damaged.

- **NOTES:**

- A good membrane will not permit any air to escape from the membrane cartridge when this test is properly performed.
- Replace cartridges which show any signs of air leakage, whether flowing from or clinging to the surface of the polymer membrane.
- New membrane cartridges should always be kept in their individual storage vials until required for service. Avoid unnecessary handling. Membrane cartridges installed on a dissolved oxygen sensor should be protected during non-use.


Testing the Cathode

PROCEDURE:

Refer to drawing below. Using a multimeter with the test leads attached to as shown, V ohms and COM connect one lead to a small piece of aluminum foil and the other lead to the WHITE (cathode) lead of the sensor cable. Gently touch the tip of the platinum cathode to the aluminum foil being careful not to damage the surface of the cathode. With the multimeter selector switch in the ohms position, the readout should indicate a direct short or "zero" ohms. This measurement verifies proper electrical continuity between the tip of the platinum cathode, the connectors, and the cable.

RESULTS:

A reading which is significantly different than "zero" ohms could indicate a faulty cable, cable connector, sensor connector, and/or internal fault to the cathode. Replace the cable assembly and repeat the test measurement. If the correct reading is not achieved, replace the sensor connector. If the correct reading is not achieved after these two steps, the sensor should be returned to the factory for further service.

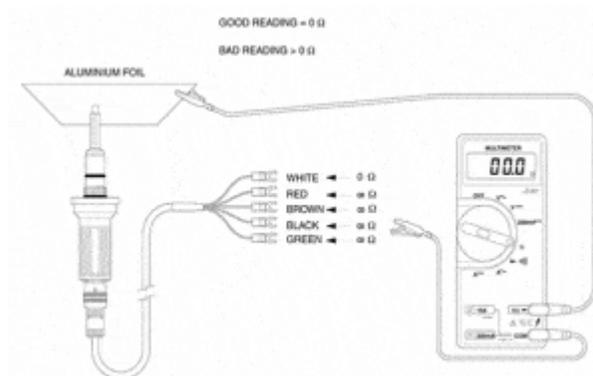

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2022 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.

TMP-BF-102101


How Do I test My OxyProbes?

PROCEDURE:

Refer to drawing below. Using a multimeter with the test leads attached to V ohms and COM as shown, connect one test lead to the RED (anode) lead of the sensor cable. Gently touch the tip of the other test lead to the outer surface of the silver anode. With the multimeter selector switch in the ohms position, the readout should indicate a direct short or "zero" ohms. This measurement verifies proper electrical continuity between the anode, the connectors, and the cable.

RESULTS:

A reading which is significantly different than "zero" ohms could indicate a faulty cable, cable connector, sensor connector, and/or internal fault to the cathode. Replace the cable assembly and repeat the test measurement. If the correct reading is not achieved, replace the sensor connector. If the correct reading is not achieved after these two steps, the sensor should be returned to the factory for further service.

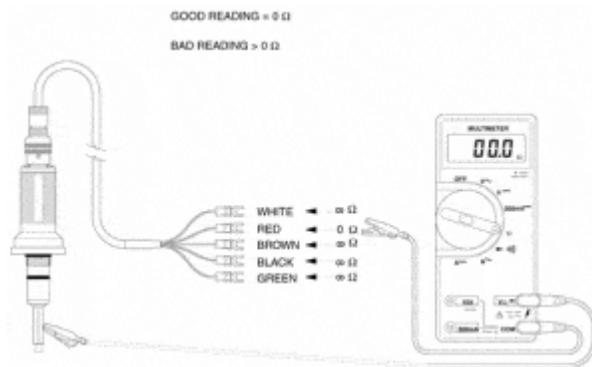

PROCEDURE:

Refer to drawing below. Using a multimeter with the test leads attached to V ohms and COM as shown, connect one test lead to the BROWN (RTD) of the sensor cable and the other test lead to the BLACK (RTD) of the sensor cable. With the multimeter selector switch in the ohms position, the readout should indicate between 27.0 k ohms to 22.0 k ohms at room temperature (20 to 25°C) or other appropriate resistance value depending upon the ambient temperature. This measurement verifies the internal thermistor is functioning properly.

RESULTS:


A reading which is significantly different than the values given above could indicate a faulty cable, cable connector, sensor connector, and/or internal fault with the thermistor. Replace the cable assembly and repeat the test measurement. If the correct reading is not achieved, replace the sensor connector. If the correct reading is not achieved after these two steps, the sensor should be returned to the factory for further service.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2022 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.

TMP-BF-102101

How Do I test My OxyProbes?

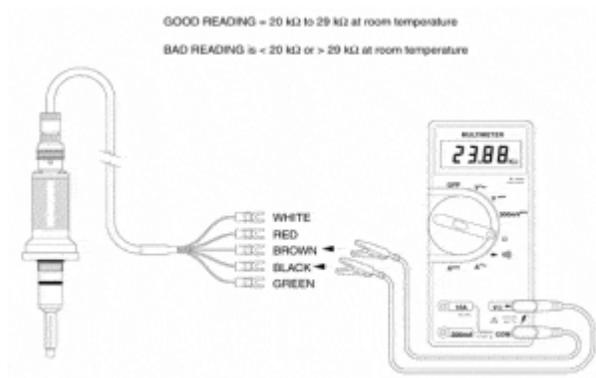

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding products or services described herein or in their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the design or specification of such products at any time.

© 2022 Broadley-James Corporation. All rights reserved. Visit www.broadley-james.com/trademarks for trademark information.

TMP-BF-102101